

# ART CLAY<sup>TM</sup> SILVER **Basic Instruction Guide #057**

## UV Resin Charm

Level: Basic

## Gold Foil Charm




### <Materials>

Art Clay Silver 5g, R-168 Acrylic UV resin a small amount, R-043 Gold Foil (3.5x5cm, K24 extra thick)

### <Step by Step Guide>

- 1) Make a teardrop shape with 5g of clay. Insert a small flat screw eye on the top and smooth the join with a small amount of Paste Type, and dry. Fire in a kiln at 800C/1472F for 5 minutes. Polish with a stainless steel brush. Make a ball with a scrap of gold foil.
- 2) Attach some transparent tape on the back of the piece. Paint some clear UV resin thinly.
- 3) Place the gold foil, and cure for 5 minutes in a UV light box. Paint more clear UV resin again, then cure and finish.

## Lacy Charm

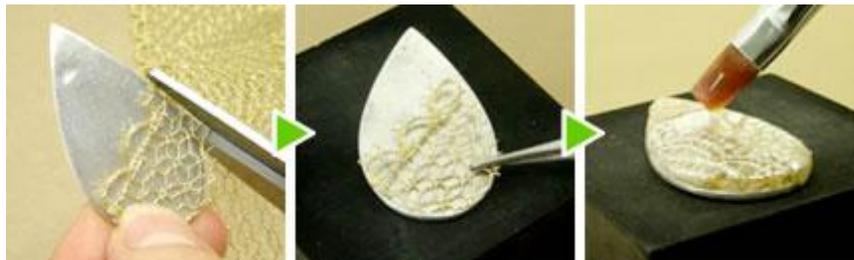


### <Materials>

Art Clay Silver 7g, R-168 Acrylic UV resin a small amount, Lace some

### <Step by Step Guide>

- 1) Make a teardrop shape with 7g of clay. Insert a small flat screw eye on the top and smooth the join with a small amount of Paste Type, and dry. Fire in a kiln at 800C/1472F for 5 minutes. Cut the lace according to the shape. Paint some clear UV resin thinly on the position for the lace, place and cure in a UV light box for 5 minutes.
- 2) Paint more clear UV resin again, cure for 5 minutes in UV light box, and finish.

## Flower Earrings

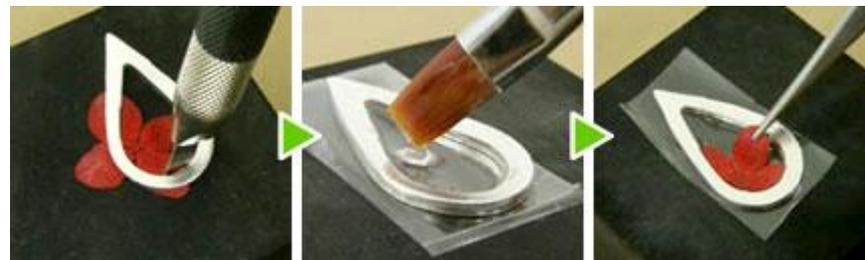

### <Materials>

Art Clay Silver 2g each, R-168 Acrylic UV resin a small amount, Pressed flowers some

### <Step by Step Guide>

- 1) Make 2 teardrop shapes and use 2g for each. Insert a small flat screw eye on the top and smooth the join with a small amount of Paste Type, and dry. Fire in a kiln at 800C/1472F for 5 minutes. Polish with a stainless steel brush. Cut the pressed flower for the piece.
- 2) Attach some transparent tape on back of the piece. Paint some clear UV resin thinly.
- 3) Place the flower, and cure for 5 minutes in UV light box. Paint more clear UV resin again, cure and finish.